CABINET PARTS

29"ELECTRIC DRYER

For Models: LER7620LQ0, LER7620LW0, LER7620LG0
(Designer White) (White/Grey) (Biscuit/Gold)

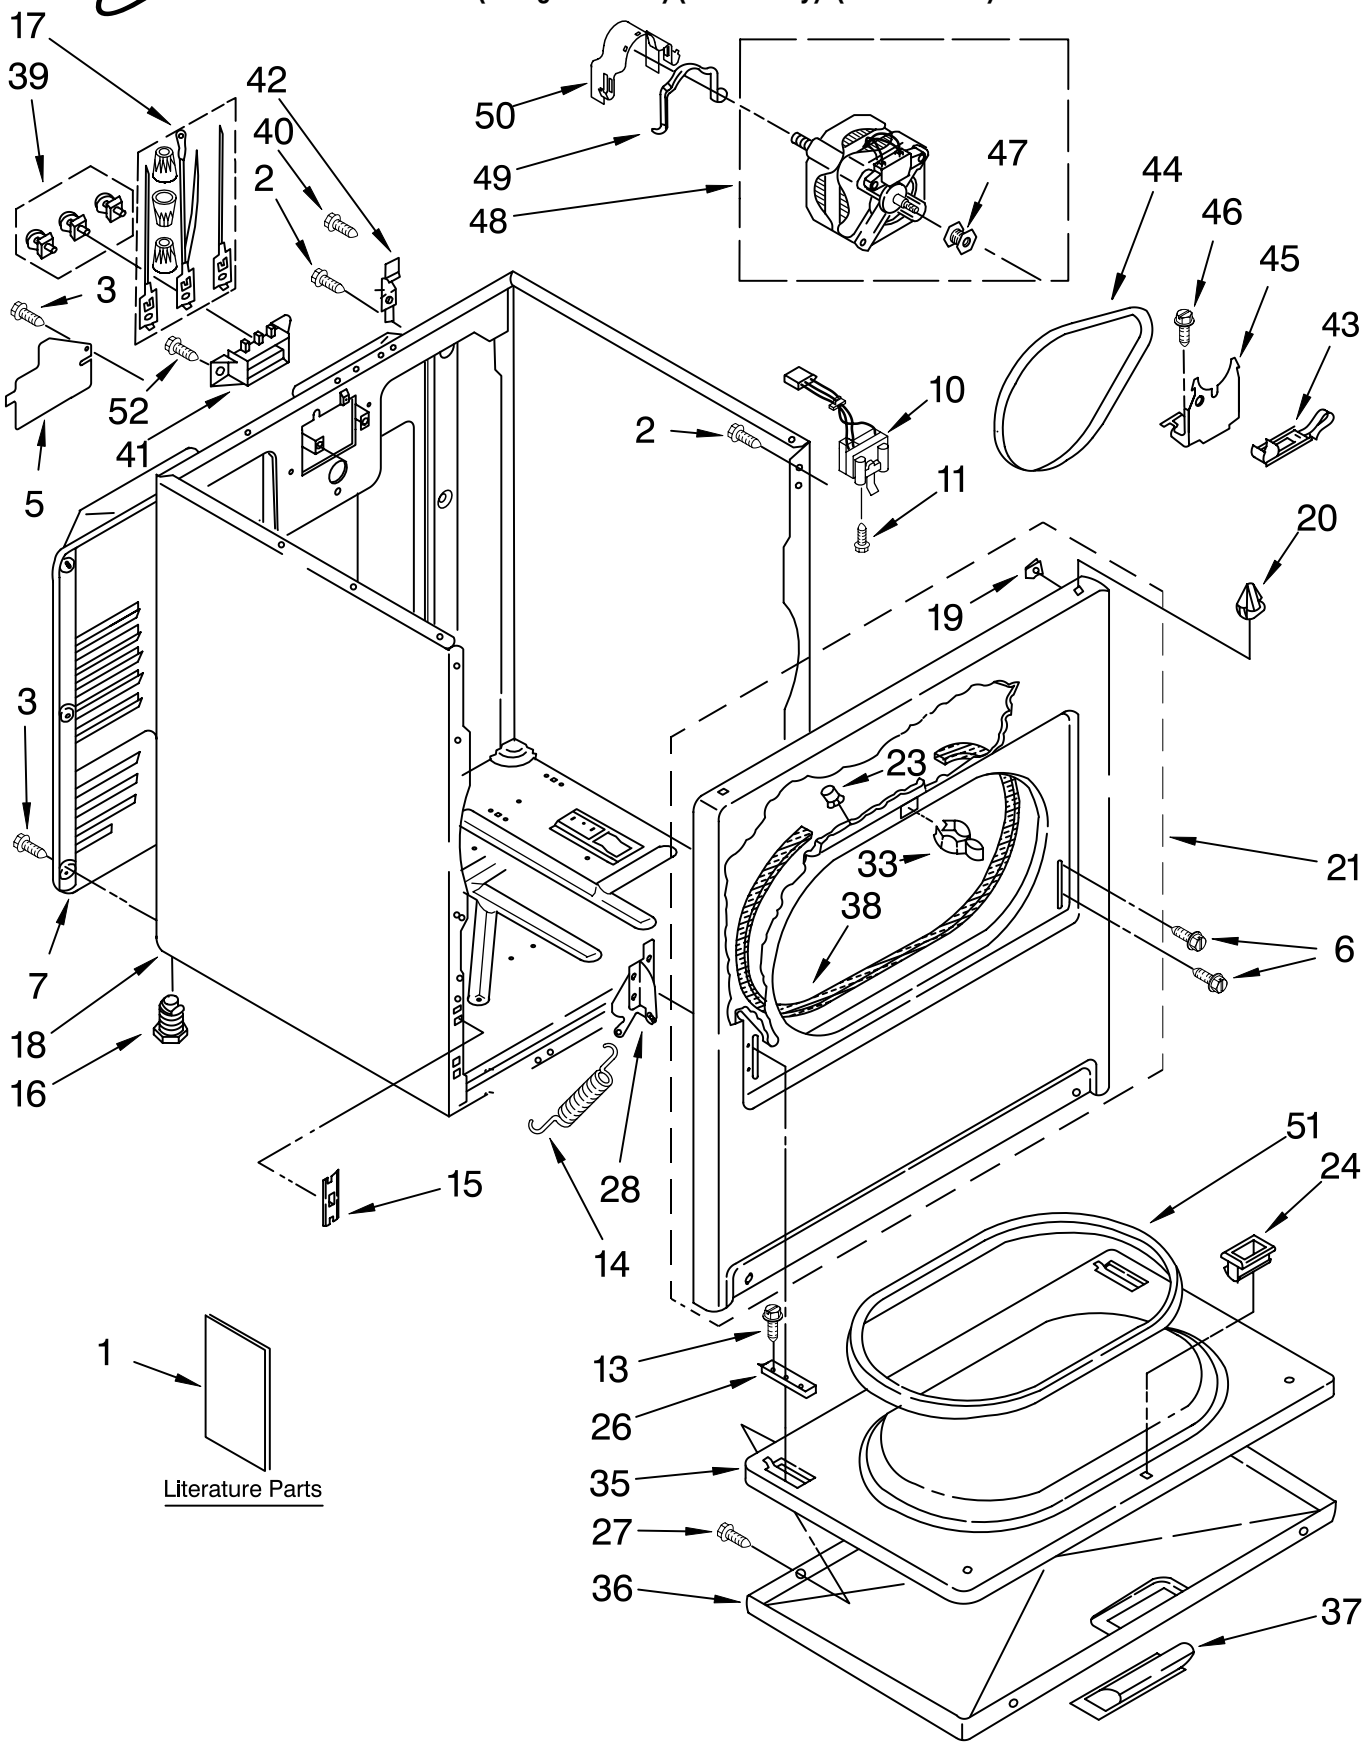

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Models: LER7620LQ0, LER7620LW0, LER7620LG0
(Designer White) (White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT8535829	Instructions, Installation
	LIT8522243	Use & Care Guide
	LIT3979703	Label, Wiring Diagram
		Following May Be Purchased
		DO−IT−YOURSELF REPAIR MANUALS
	LIT677818	Dryer
2	343641	Screw, 10−16 x 1/2
3	693995	Screw, 8−18 x 3/8
5	3396795	Cover, Block
6	342043	Screw, 10−32 x 3/8
7	3396805	Panel, Rear
10	3406107	Door Switch Assembly
11	697773	Screw, 6−20 x 7/8
13	3357011	Screw, 10−16 x 1/2
14	692495	Spring, Door (2)
15	3394083	Clip, Front Panel (2)
16	3392100	Foot, Dryer
	279810	Foot−Optional (Extended Length Package of 2) (Not Included)
17	279318	Terminal, Tinned & Brass (3) (Includes Illus. 39)
18		Cabinet
	8530603	White
	8530606	Biscuit
19	98234	Clip, Ground
20	690363	Lock, Front Top (2)
21		Panel, Front
	695620	White
	3977244	Biscuit
23	685203	Clip, Felt Pad (3)
24	3389441	Catch, Door Assembly
26	337189	Clip, Hinge (2)
27	694091	Screw, 8−18 x 3/8
28	8066056	Hinge, R.H.
	8066057	Hinge, L.H.
33	696144	Strike, Door
35	695737	Door, Rear
36		Door, Front
	3393549	White
	3977241	Biscuit
37		Handle, Door
	690270	White
	3977242	Biscuit
38	3406129	Seal & Bearing Assembly
39	279393	Terminal Block Kit (For Terminal Block)
40	697776	Screw, 10−32 x 5/8
41	3397659	Block, Terminal
42	238088	Hinge, Top (2)
43	3394332	Idler & Slide Assembly
44	8066065	Belt, Drive
45	348780	Base, Motor
46	3400500	Bolt, 5/16−18 x 3/4
47	3394341	Pulley, 60 Hz.
48	661654	Motor Assembly 60 Hz.
49	660658	Clamp, Motor
50	3404162	Clamp, Motor (W/Shield)
51	3390731	Seal, Door
52	3393008	Screw, 10−16 x 1/2

TOP AND CONSOLE PARTS

For Models: LER7620LQ0, LER7620LW0, LER7620LG0
(Designer White) (White/Grey) (Biscuit/Gold)

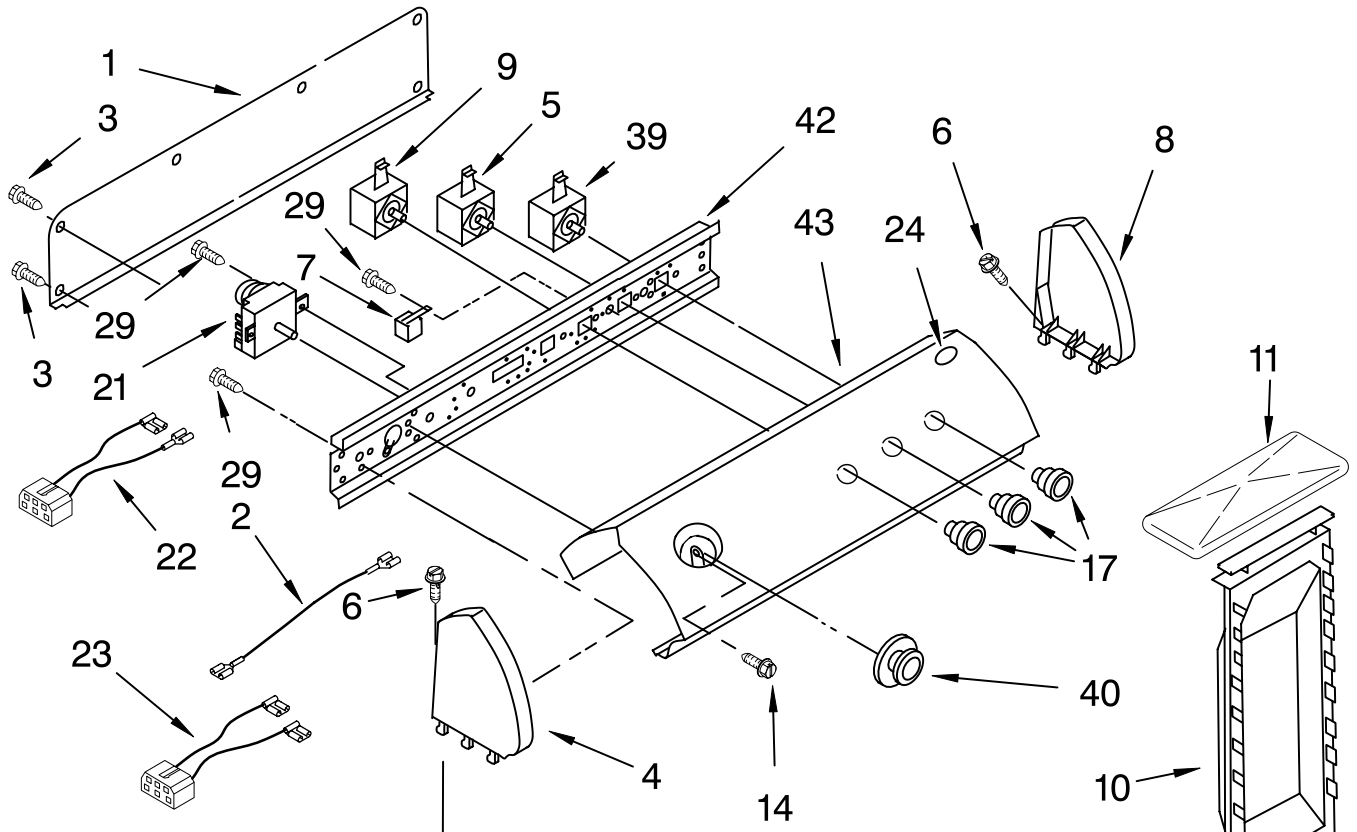

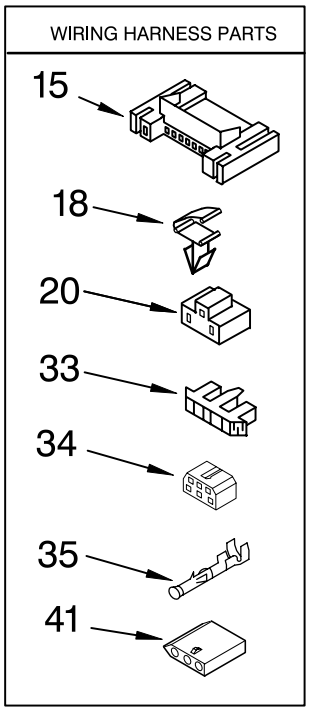

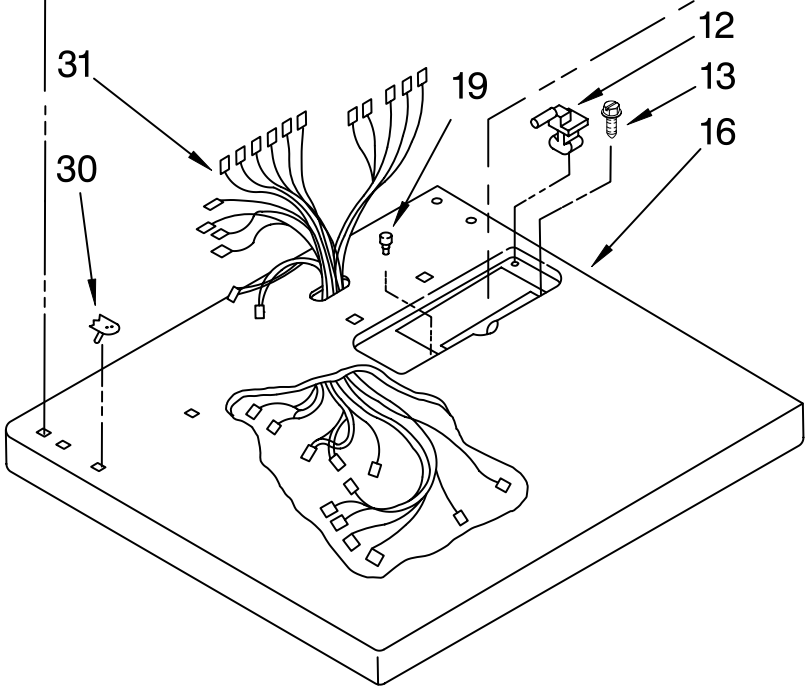

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: LER7620LQ0, LER7620LW0, LER7620LG0
(Designer White) (White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	8274261	Panel, Rear Console
2	3401684	Wire, Jumper (Black)
3	693995	Screw, Hex Head
4		Cap, End (L.H.)
	8271365	White
	8271368	Biscuit
5	3405156	Switch, Wrinkle Shield
6	388326	Screw, Console
7	694419	Buzzer, Mini
8		Cap, End (R.H.)
	8271359	White
	8271362	Biscuit
9	3399639	Switch, Temperature
10	349639	Screen, Lint
11		Cover, Lint Screen
	8283378	White
	8283380	Biscuit
12	3978605	Hinge, R.H.
	3978606	Hinge, L.H.
13	688983	Screw, 8−18 x 5/8
14	3400859	Screw, Grounding
15	3395683	Connector (Motor)
16		Top
	8271390	White
	8271392	Biscuit
17		Knob, Control (3)
	8271339	LER7620LQ0
	8316540	LER7620LW0
	8316545	LER7620LG0
18	3394427	Clip−Harness
19	297535	Bumper, Lint Lid
20	3401144	Connector, (PTS Relay)
21	3979618	Timer, 60 Hz.
22	3397695	Wire, Jumper (Guard On/Off)
23	3396029	Wire, Jumper (Temperature)
24	3955775	Medallion
29	3390646	Screw, Mounting (8−18 x 5/16)
30	357213	Nut, Push−In (2)
31	8299873	Harness, Wiring
33	3397269	Connector (Timer)
34	3347243	Connector 6−Circuit
35	94614	Terminal
39	3398095	Switch, Push−To−Start
40		Timer Knob Assembly
	8312687	LER7620LQ0
	8316538	LER7620LW0
	8316549	LER7620LG0
41	3936144	Connector
42	8271418	Bracket, Control
43		Panel, Control (Includes Illus. 24)
	8532614	White
	8532615	Grey
	8532616	Gold

BULKHEAD PARTS

For Models: LER7620LQ0, LER7620LW0, LER7620LG0
(Designer White) (White/Grey) (Biscuit/Gold)

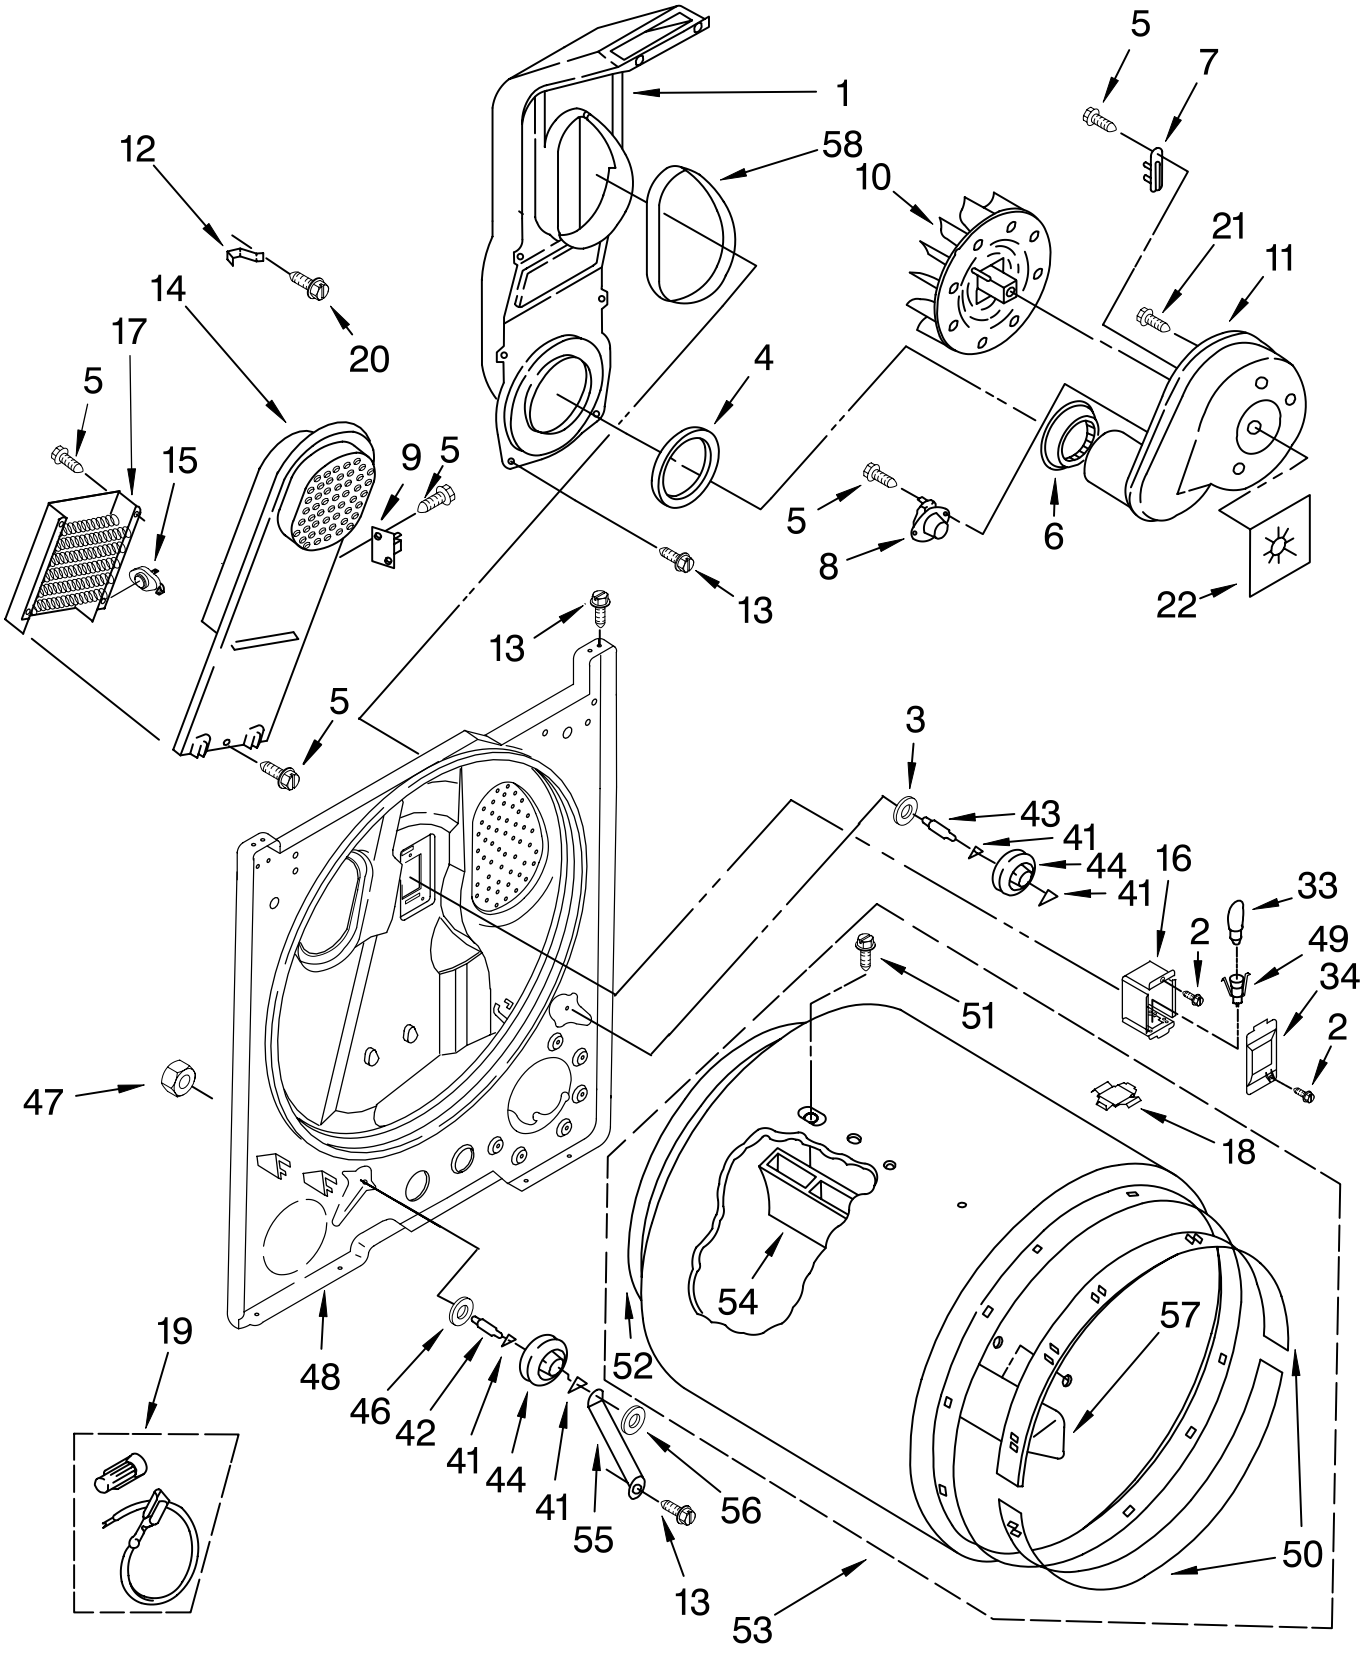

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: LER7620LQ0, LER7620LW0, LER7620LG0
(Designer White) (White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	487909	Screw, 8−15 x 1/2
3	3388703	Washer−Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8−18 x 3/8
6	696302	Shield, Exhaust
7	3392519	Thermal Fuse
8	3387134	Thermostat, Internal−Bias
9	3977393	Thermal Cut−Off (Includes Illus. 15)
10	694089	Wheel, Blower (Includes Illus. 22)
11	3405016	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10−16 x 1/2
14	3397566	Box, Heater
15	3977767	Thermostat, 221°F (105°C)
16	3977373	Bracket, Drum Light
17	3403585	Element, Heater
18	8066086	Drum Hole Plug
19	279457	Wire Kit, Terminal (For Heater Element Wiring Harness Repair)
20	489463	Screw, 8−18 x 5/8
21	3390647	Screw, 8−18 x 1/2
22	3394196	Seal, Blower
33	3406124	Bulb
34	3402841	Lens, Drum Light
41	690997	Ring, Tri
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397588	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8−16
48	3403413	Bulkhead
49	3403634	Socket Assembly
50	692526	Ring, Bearing (2)
51	97787	Screw, 11−16 x 3/4
52	3406130	Seal, Rear Drum
53	695587	Drum Assembly
54	692490	Baffle, Drum (2)
55	3976434	Bracket, Support
56	90296	Clip
57	3403636	Baffle, Drum (1)
58	339956	Seal

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
		ACCESSORY PARTS
	3406839	Dry Rack
	279948	Kit, Dryer Repair
	8522199	Kit, Dryer Vent Testing
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	4392899	Biscuit
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	4392901	Biscuit
	350938	Primer, Gray
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
	4392900	Biscuit (Uncut)